




Welcome to LoneStar Tracking! Thank you for choosing LST to help you monitor your assets 24/7 from any smart

We recommend professional installation of the Scorpion LTE with starter disable. Although the tracker only requires a positive and negative to operate, installation of the starter disable relay is complex and requires cutting into your factory wiring.

To begin, first install the Scorpion in the vehicle. Please connect the three wires noted below:

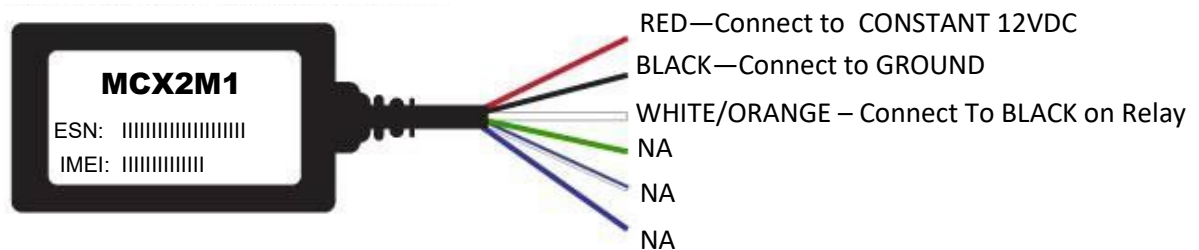

Next, you will have to cut the wire between the ignition and the starter relay on the vehicle. The RED wire on the ignition disable relay goes to the ignition switch which is the end of the wire you cut. The YELLOW wire on the ignition disable relay goes to the starter.

Connect the WHITE relay wire to a constant 12V

Connect the BLACK relay wire to the WHITE/ORANGE on the Scorpion

To locate your asset from your smart device or computer go to:



Login Site: <http://fleetone.lonestartracking.com>

Your Username and Password were emailed to you on or shortly after purchase. (Please feel free to call, chat or email us to reset.)

For our iPhone or Android apps, visit the app store and search for “LoneStar Tracking”.

